


ASSEMBLY/INSTALLATION
INSTRUCTIONS:

FIGURE 1

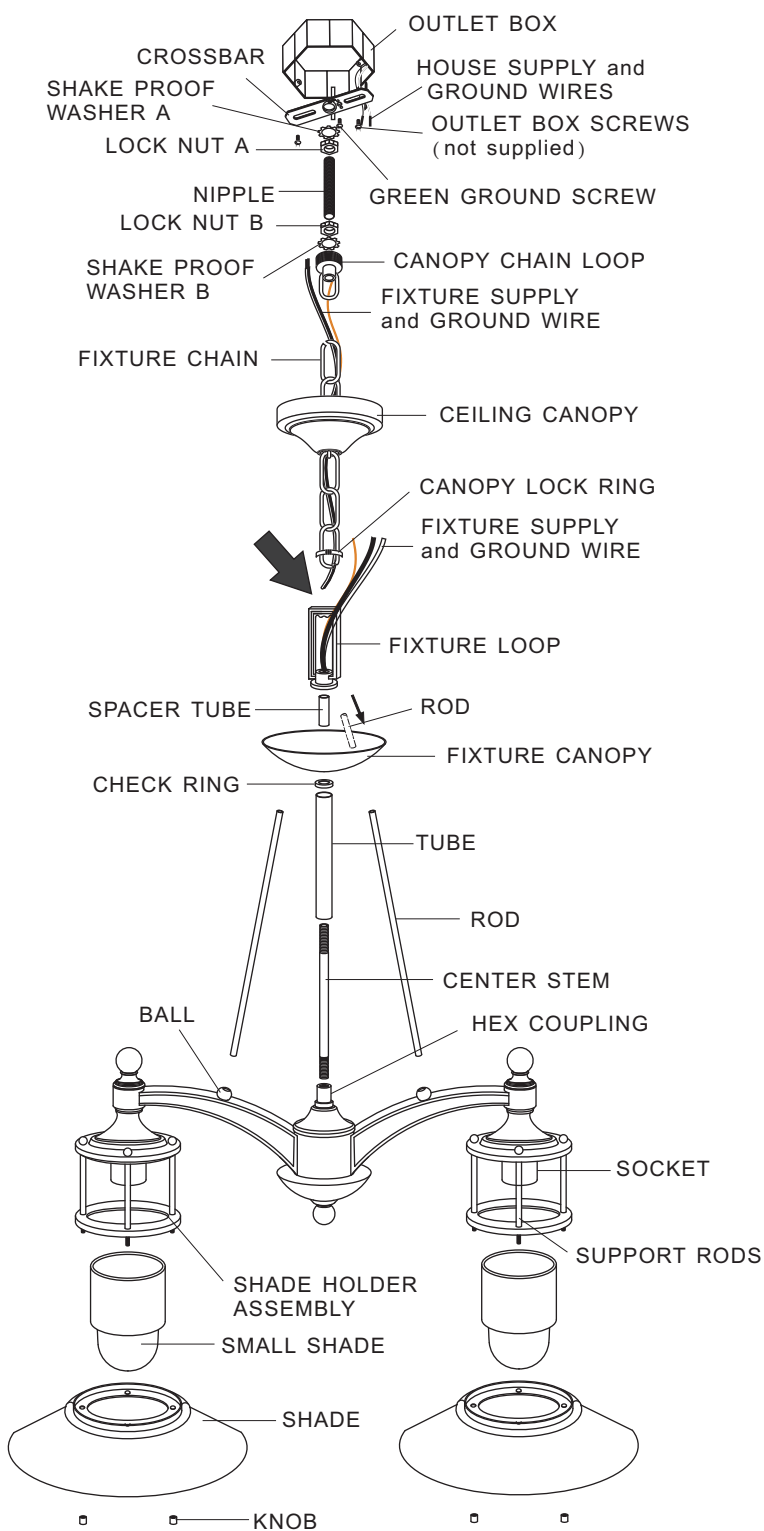

1. Before beginning fixture fabrication, carefully unpack all parts referring to illustration FIGURE 1 for parts identification.
2. Turn the power to installation point OFF at circuit breaker.
3. Thread the end of CENTER STEM into HEX COUPLING on the top center of JUNCTION BOX. Hand tighten until snug. Locate TUBE, CHECK RING, FIXTURE CANOPY and SPACER TUBE over top end of CENTER STEM, secure by threading FIXTURE LOOP onto the top end of CENTER STEM. Hand tighten until snug.
4. Locate ends of RODS slipping up into the holes in the FIXTURE CANOPY and then drop down into the holes on BALLS.
5. Fasten the CROSSBAR to the OUTLET BOX with (2)OUTLET BOX SCREWS(not supplied). Proceed to thread LOCK NUT A and SHAKE PROOF WASHER A onto the top end of NIPPLE. Thread NIPPLE into the center of CROSSBAR. Locate the LOCK NUT B onto the bottom end of the NIPPLE. Tighten LOCK NUT A against CROSSBAR with plier until snug.
6. Locate the FIXTURE CHAIN and determine desired hanging height of fixture. Adjust chain by removing links if needed. Please note that depending on chain material thickness, you might be required to use chain pliers to spread links open. Proceed to attach one end of chain to FIXTURE LOOP, attached to top of fixture. Pass the fixture wires through the following mounting components in this order: 1)CANOPY LOCK RING; 2)CEILING CANOPY.
7. **Making the connections:**(2 people recommended for the remaining steps) Position the fixture under the ceiling mounted outlet box. Pass SHAKE PROOF WASHER B over the NIPPLE. Thread CANOPY CHAIN LOOP onto NIPPLE. Thread LOCKNUT B down the NIPPLE, against the CANOPY CHAIN LOOP and snug with pliers. Pass the wires through the NIPPLE. Take up wire slack and trim wires so that approx. 6" will remain inside outlet box. Proceed to attach the top of the FIXTURE CHAIN to the bottom of the CANOPY CHAIN LOOP. Using wire connectors(not supplied) connect the HOUSE GROUND WIRE to the FIXTURE GROUND WIRE; connect the HOUSE WHITE WIRE to the FIXTURE SUPPLY WIRE (WHITE or RIBBED SIDE); connect the HOUSE BLACK (or RED) WIRE to the FIXTURE SUPPLY WIRE(BLACK or SMOOTH SIDE). Wrap each connection with approved electrical tape.
8. With the proper connections made, proceed to push the CEILING CANOPY upward over the OUTLET BOX. Be sure that all wires are carefully tucked into the OUTLET BOX cavity. Secure canopy against ceiling by threading CANOPY LOCK RING onto the CANOPY LOOP. Tighten until snug.
9. Install bulbs referring to fixture markings and/or labels for maximum wattage.
10. Locate SMALL SHADE upward into SHADE HOLDER ASSEMBLY and over BULB and SOCKET. Lift SHADE upward and match the holes on it with ends of SUPPORT RODS. Secure by threading KNOBS onto ends of SUPPORT RODS. Hand tighten until snug.
11. Restore power to the installation point ON. Retain this sheet for future reference.

IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,
CONSULT A LICENSED ELECTRICIAN!