


Installation Guide For Styles WKF1911EK and WKF1911W

Tools Required

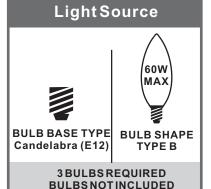



Fixture Height Adjustable 24.75" to 120.75"


⚠ Warnings and Cautions


Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.


Turn off power to the fixture and allow the bulbs to cool before replacing.

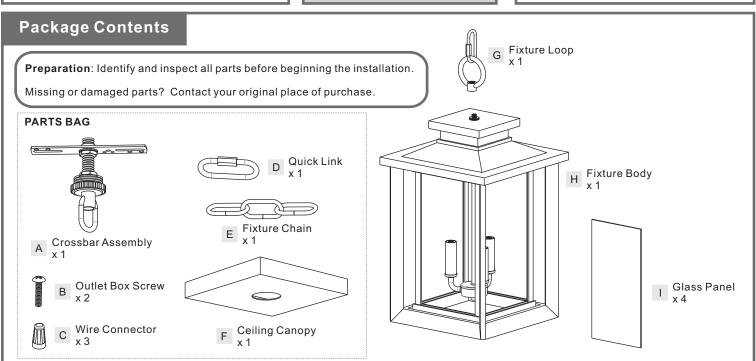

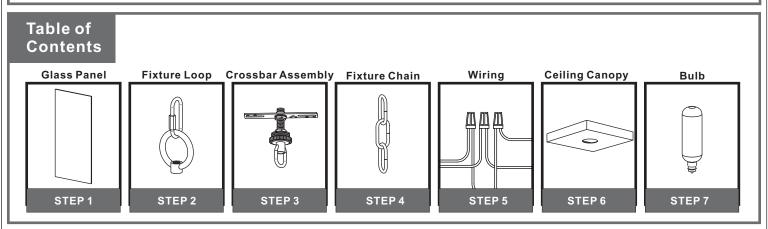

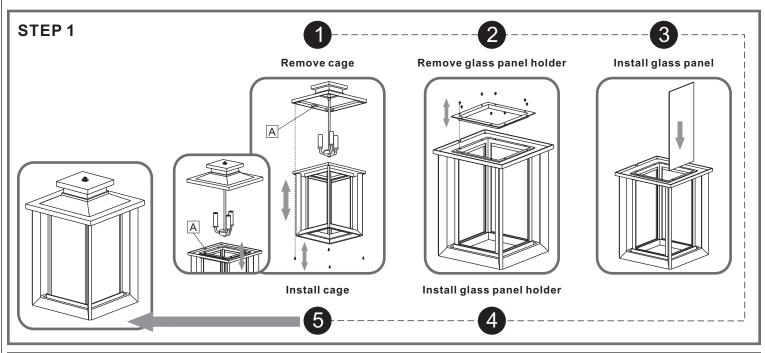

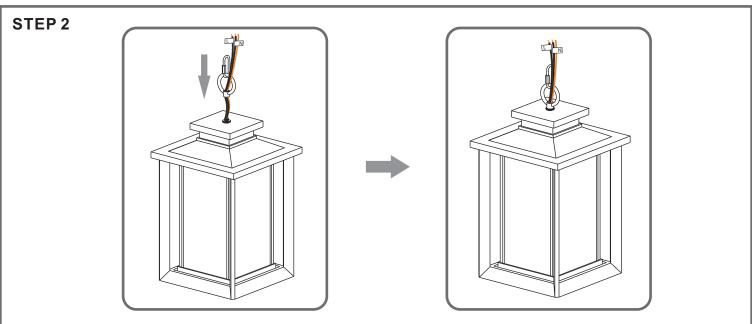

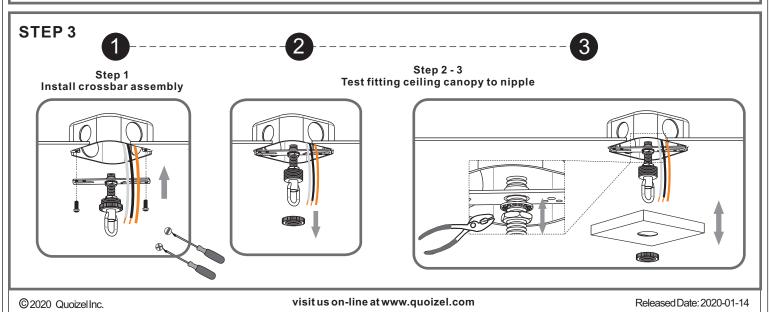








Step 1 Adjust fixture chain length



Step 2 - 3 Install Fixture Chain

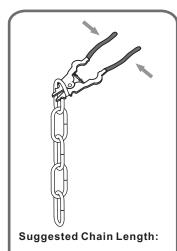

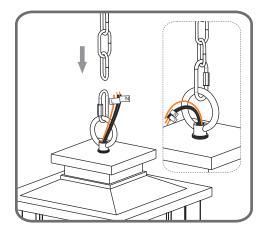

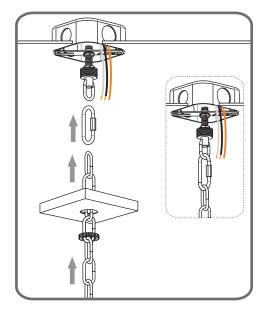



8' ceiling: 11" Chain 9' ceiling: 23" Chain 10' ceiling: 35" Chain





Step 1 Feed the fixture wires through the loop

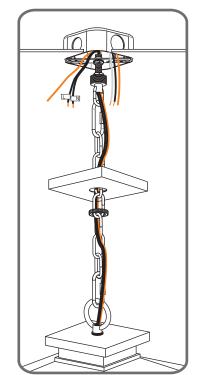

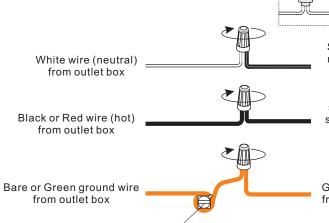


Supply wire from fixture ribbed side or identified with the Label "N"

supply wire from fixture smooth side or identified with the label "L"

Ground wire from Fixture

*Green Ground Screw on crossbar optional

STEP 6

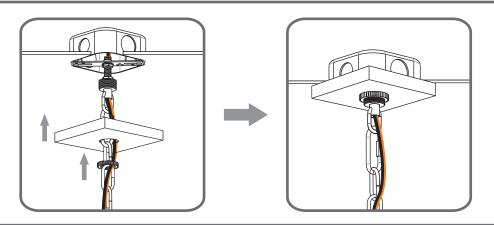

STEP 7

